

DE DISPLAYSTAR®

Signicade Deluxe


Sign Insertion Instructions

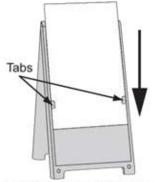

 Slide sign down through the tabs

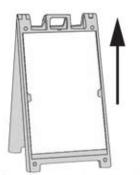

3. Push sign up into top slot

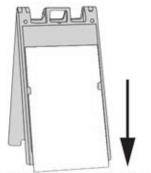

2. Slide through, pulling sign in front of bottom slot until sign hits the ground



Slide sign down into bottom slot

Sand Filling Instructions

The Signicade Deluxe has four fill holes for sand, two on each side of the sign stand.

Remove plug from fill hole and fill with sand, 2.5 lbs, of sand per hole for a total 10 lbs. per sign frame is recommended.



Sand Fill Holes

Play sand is suggested for ease of filling.