

# 10' X 10' TENT • SETUP INSTRUCTIONS



## Kit Includes:

 
- 1 - Frame
- 2 - Soft Case w\ Wheels
- 3 - Canopy
- 4 - Stake Kit



1



2




3



4

## Instructions
 
### Step 1

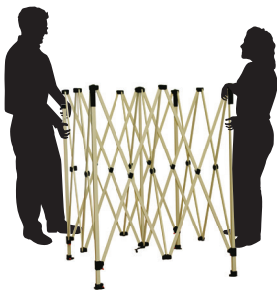

Remove the frame from the case and place where you want to display the tent.

With two people, one on each side pull the frame opposite of each other until it is about 4ft high. (see image to the left)

### Step 2



Remove and unfold the canopy. You will then drape this over the top of the frame.

### Step 3



Attach the loop velcro on the canopy to the hook velcro on the frames four corners.

 
### Step 4



Stand diagonal to each other, lift and pull the frame out. You will need to alternate ends a little at a time until the frame no longer expands.

**DO NOT DRAG FRAME-THIS COULD BEND THE LEGS**

### Step 5

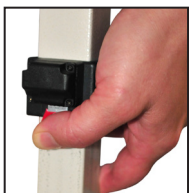

Unlock the height adjustment connectors on frame legs. With connector in unlock position, lift the frame upwards until the four sliding connectors lock into place on the legs of the frame.

### Step 6



Place your foot on the base of the tent legs as you release and extend the telescoping legs. Raise the tent to your desired height and lock the legs into place.



**NOTE:** To move an assembled frame, make sure someone is located at each leg. Lift and transport carefully at the same time

### Step 7



Lift the center of the canopy into place by turning the crank clockwise until the canopy is taut.



### Secure with Stakes

Secure by looping ropes through the "D" ring located on each corner of the canopy.

**FRAME MUST BE SECURED DOWN TO PREVENT WIND FROM LIFTING TENT AND CAUSING DAMAGE**

### Storage

Remove canopy from frame and collapse. Store collapsed frame in soft case. The canopy can be folded up and stored inside the case as well.

Store in a cool dry location. To clean, wipe with a damp cloth.