


20 Ft. Timberline Modular Display with Monitor TL1002F-S20-TV


STEP 6

D


(GRAPHIC ATTACHMENT) THIS INSTRUCTION IS RELEVANT TO FRAME, END PANELS AND HORIZONTAL BARS.

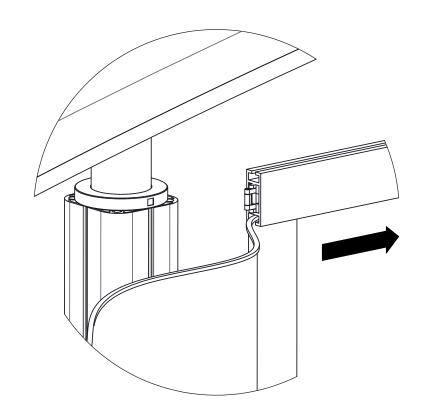

SLIDE GRAPHICS INTO BOTTOM CHANNEL OF TOP HORIZONTAL SUPPORT BAR THEN CONNECT THE SUPPORT BAR TO POSTS AT BOTH ENDS AS PER STEP 4

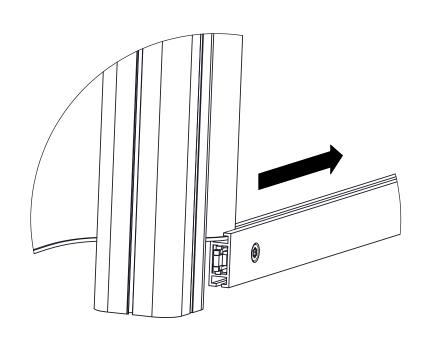


SLIDE GRAPHICS INTO TOP CHANNEL OF BOTTOM HORIZONTAL SUPPORT BAR THEN CONNECT THE SUPPORT BAR TO POSTS AT BOTH ENDS AS PER STEP 4

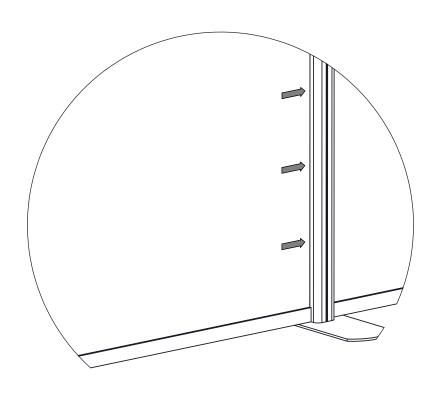



WHEN TOP AND BOTTOM HORIZONTAL SUPPORT BARS ARE ATTACHED, THE GRAPHIC SIDES MAY BE TUCKED INTO THE VERTICAL CHANNELS OF THE MAIN POST ON BOTH SIDES

 
PAGE 6




7 6 5 4

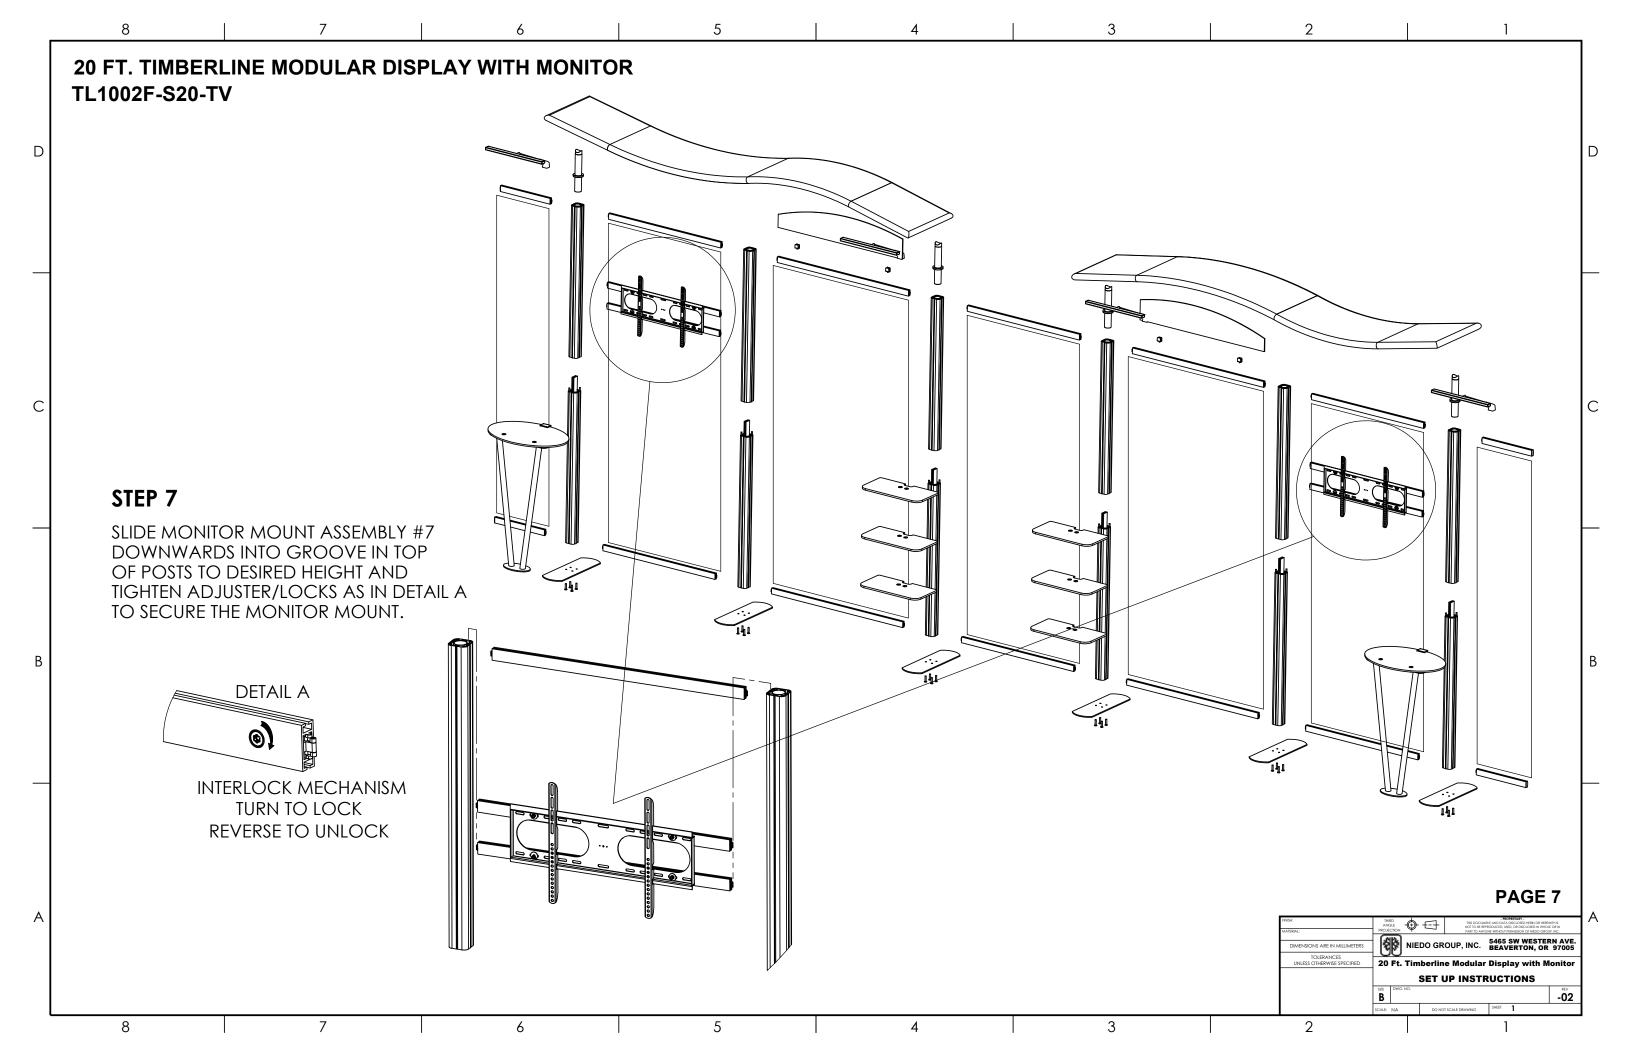


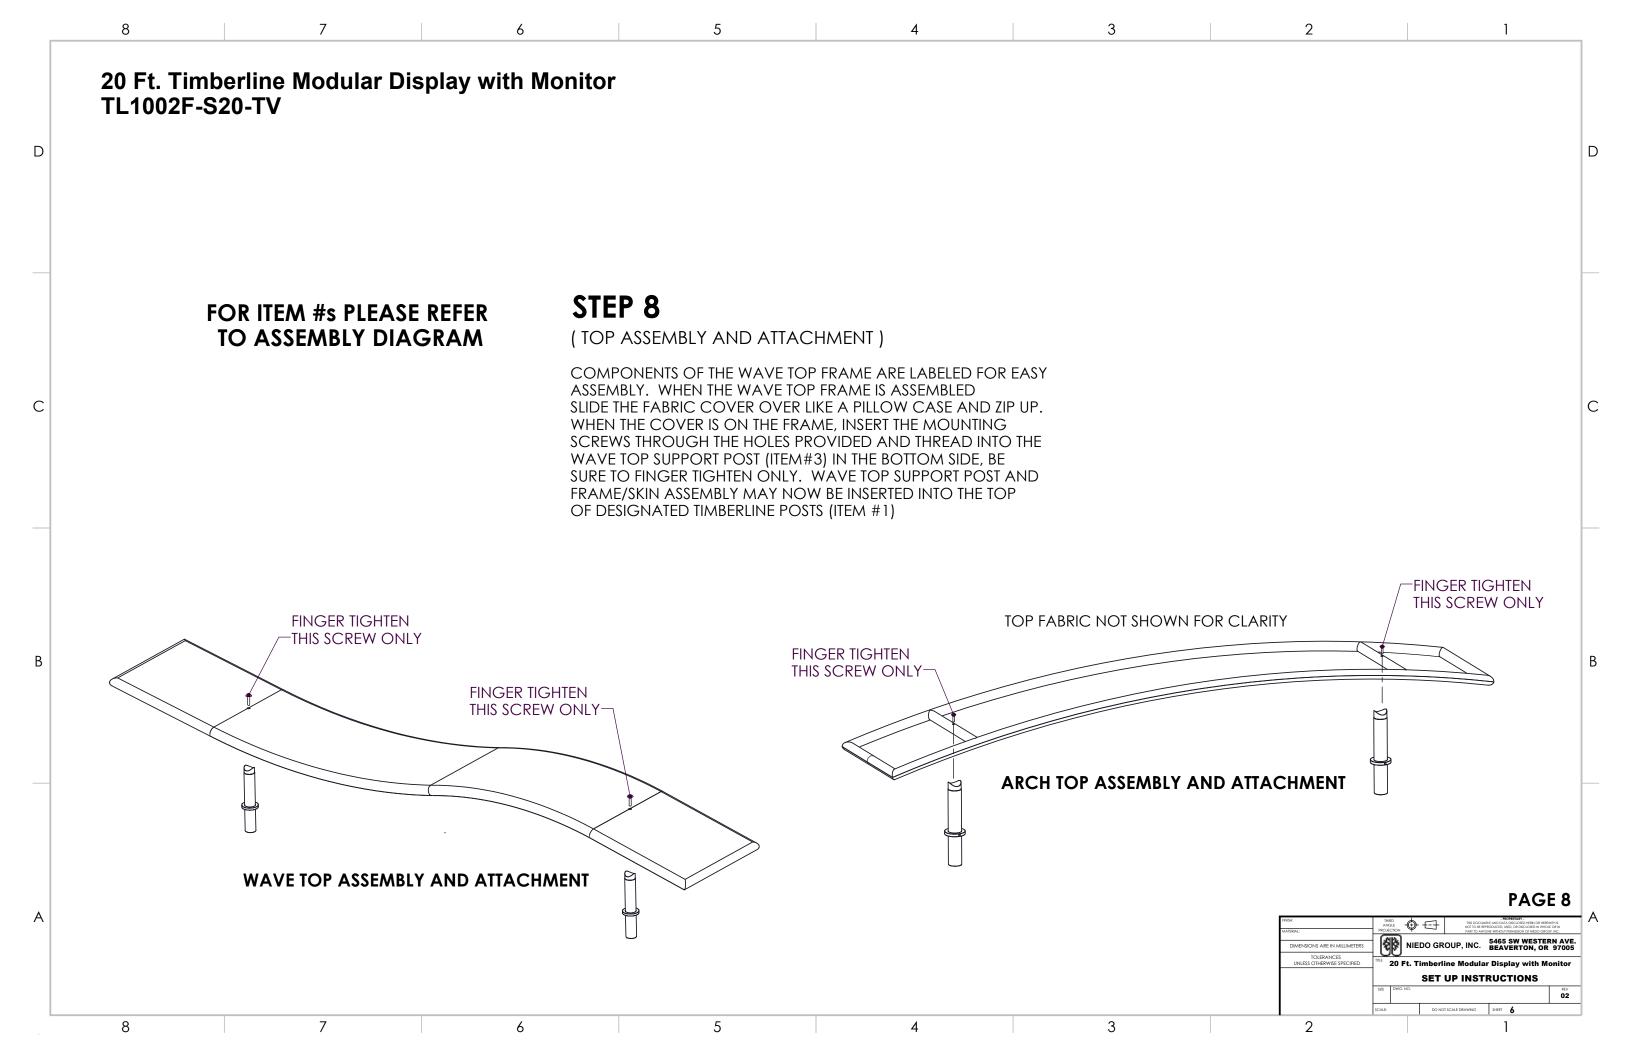

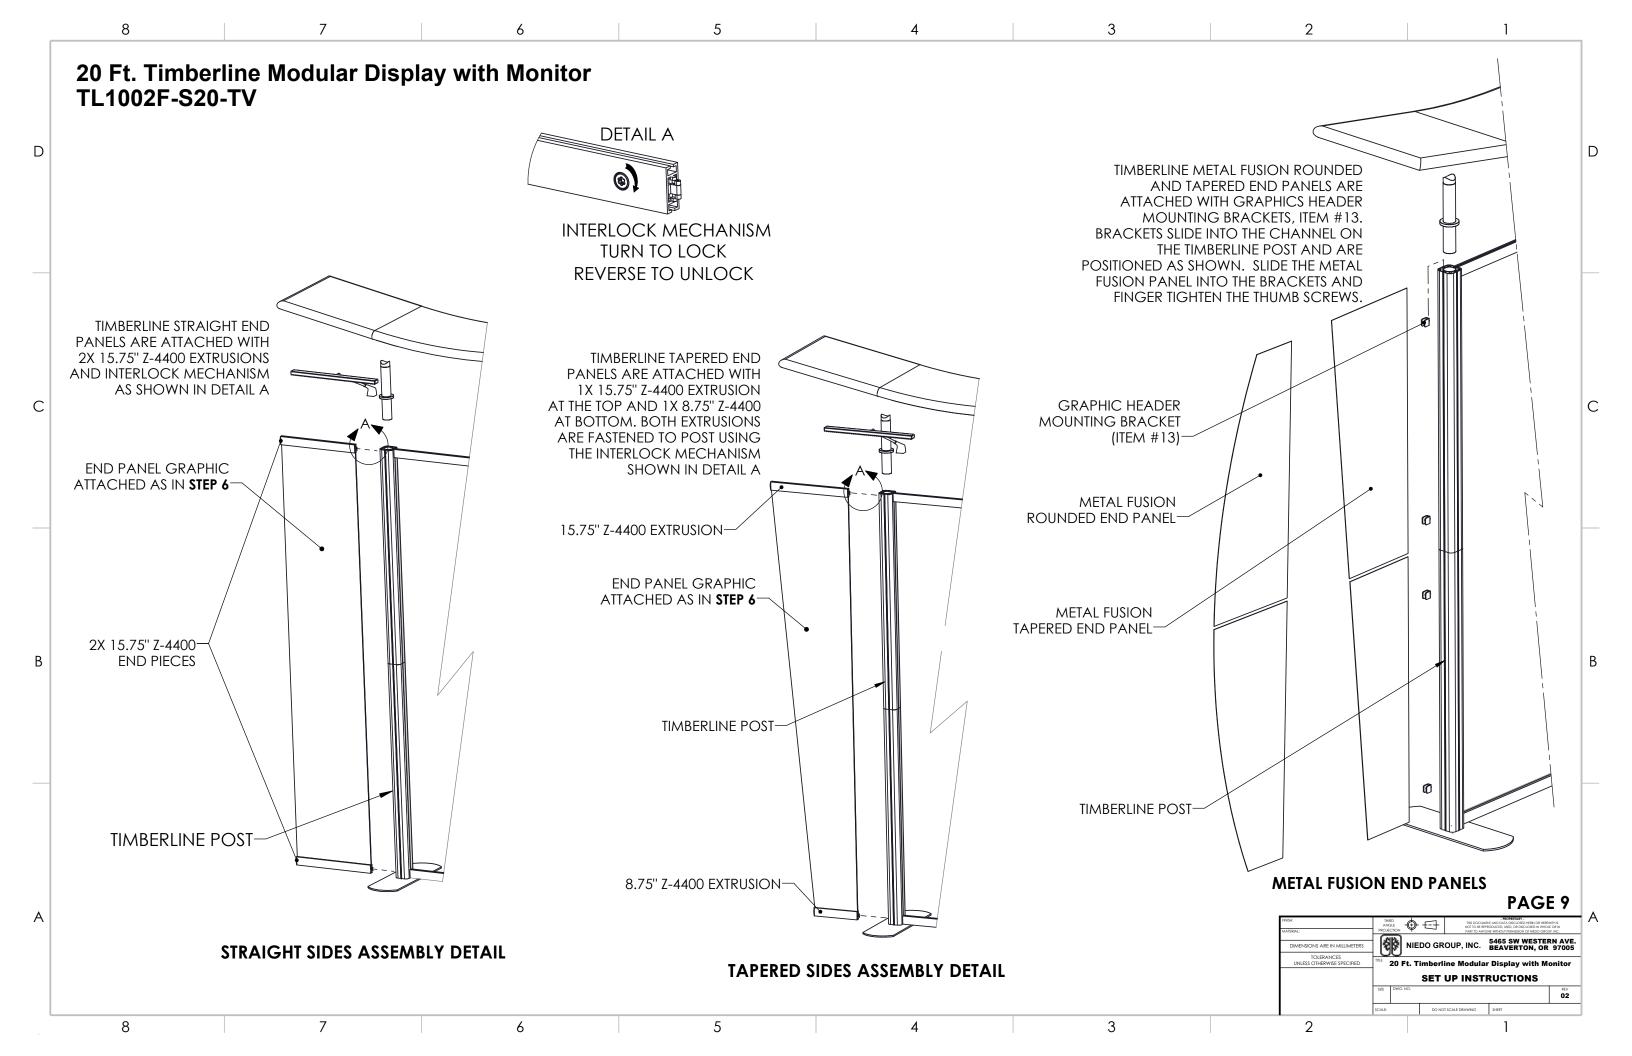

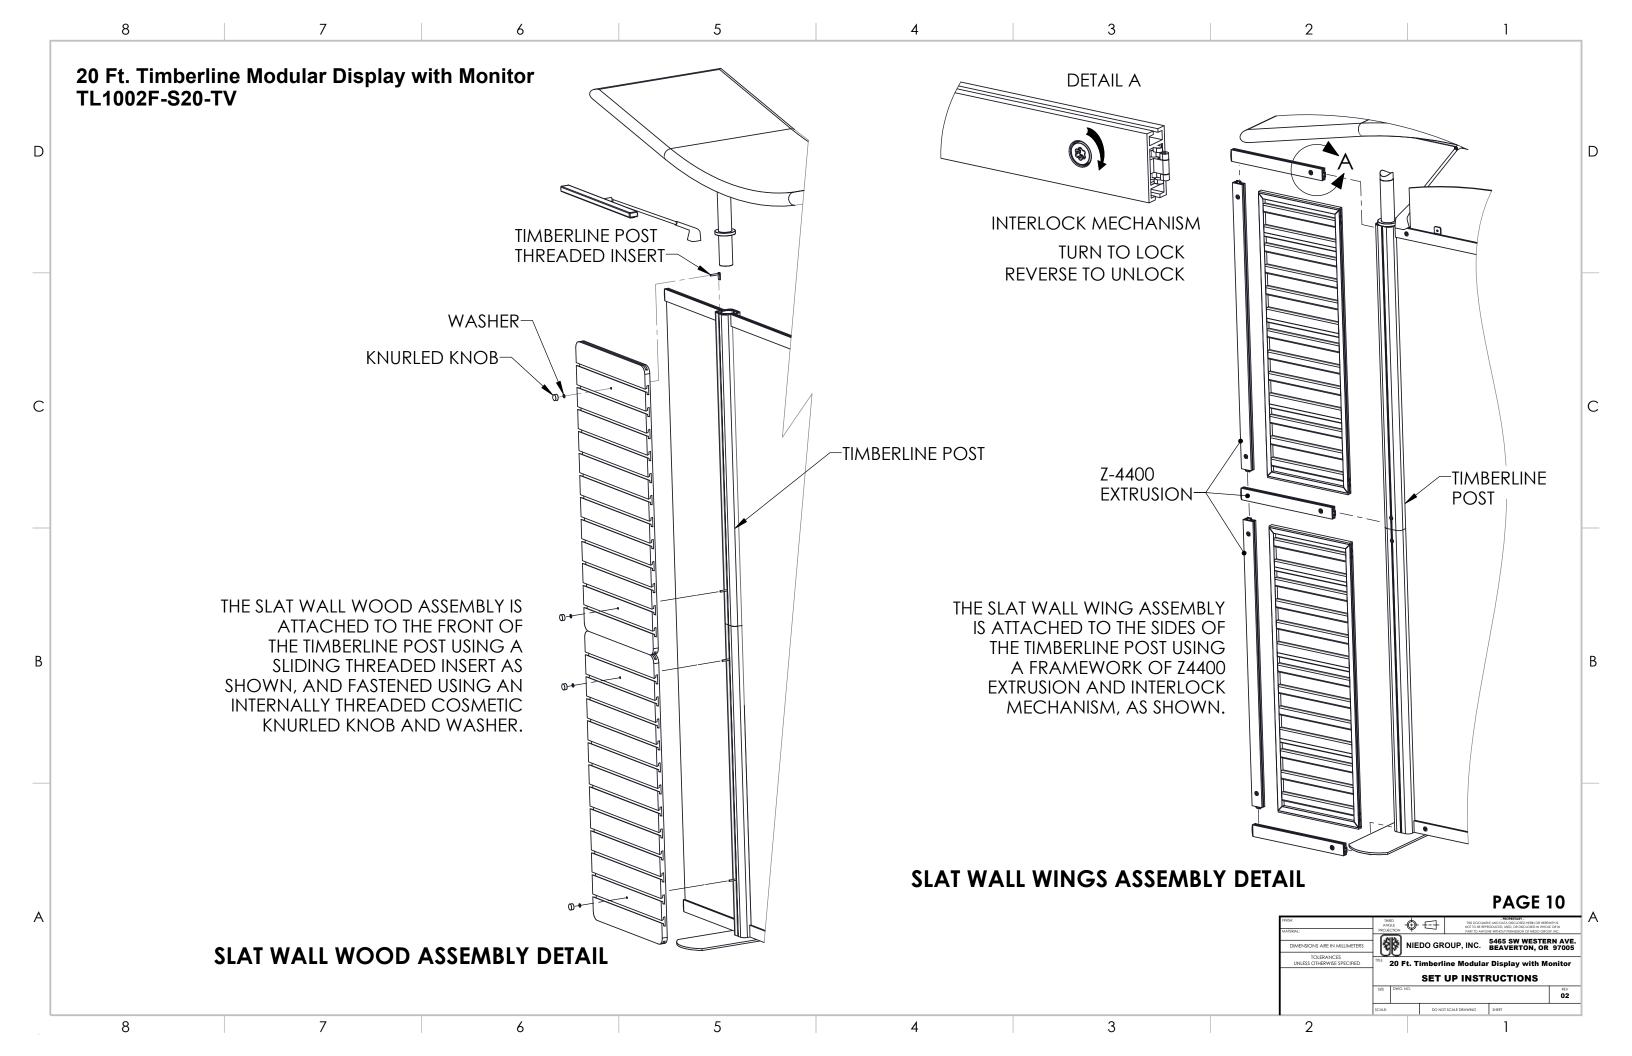

20 FT. TIMBERLINE MODULAR DISPLAY TL1002F-S20-TV

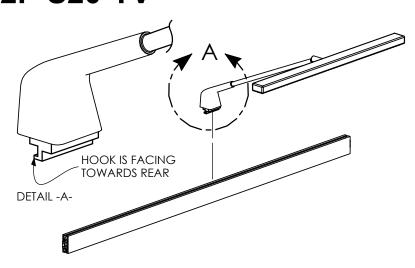

OVERHEAD LAMPS

SLIDE THE BASE ADAPTER INTO THE BOTTOM OF THE LAMP. THEN SLIDE THE LAMP INTO THE TOP GROOVE OF THE HORIZONTAL SUPPORT.

TL1007 Monitor Mount for 30-50 LCD

Each Kit includes: 1 monitor mount w/ bars attached, 12 screws &16 washers



D



thread them in line.














Safety Warning: Be careful to make sure there are no missing or defective parts. Never use defective parts. Improper installation may cause damage or serious injury.

Installing bars to your LCD monitor


- 1) To ensure optimal installation, this kit includes various screws of different diameters and lengths.
- 2) Place your TV screen down on a soft, flat surface and locate the threaded mounting points that are located on the back of the display.
- 3) Determine which screw (A/B/C) is of the correct length by carefully inserting a straw or toothpick and mark how deep the mounting point is.
- 4) If your display has a curved back or a recessed thread mounting point, a spacer (F) must be used.

5) Place the spacer (F) between the mounting bracket and display.

6) According to the size of the display's hole, choose the corresponding screw and hole on the rectangle washer, then

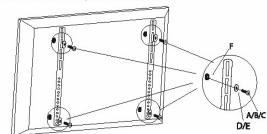


First, if the TV back is accurate you will need to use (F), if it's flat that is unnecessary. Second, the choice of screw (A/B/C) should be according to the size and depth of the install aperture in the back of the TV.

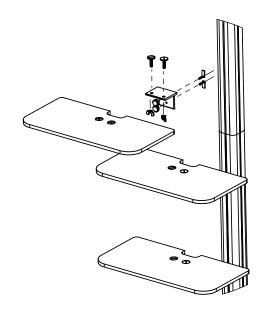

TIMBERLINE SHELVES

ATTACH BRACKETS INTO VERTICAL POSTS AND TIGHTEN. PLACE ACRYLIC SHELVES ON TOP &\$ OF BRACKET AND SECURE USING LARGE BOLTS AND WING NUTS.

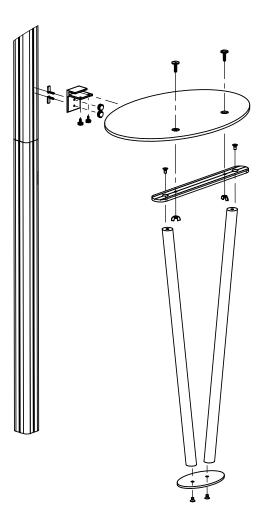

TIMBERLINE TABLE

(ALL HARDWARE IS PROVIDED)

ASSEMBLE TABLE LEGS TOGETHER WITH THE TOP AND BOTTOM BASE PLATES AND SCREWS. THEN ATTACH THE ACRYLIC TABLE TOP WITH THE LARGE BOLTS AND WING NUTS TO TOP OF BASE PLATE ON LEGS. ATTACH CLAMP TO BACK OF ACRYLIC TABLE TOP FOR INSERTION INTO VERTICAL POSTS.

PAGE 11

D

FINSH: MATERIAL:	THRD ANGLE PROJECTION THIS DOCUMENT AND DATA DOCUMENT OF RESWITH- NOT TO BE REPRODUCED, USED, OR DOCUMENT ON HOME OR PART DATA MOTOR WINDLY ERBANGS HOT PROSED GRADE, PART DATA MOTOR WINDLY ERBANGS HOT PROSED GRADE REPORT OF THE PART OF THE PA				
DIMENSIONS ARE IN MILLIMETERS	ı	NIEDO GR	OUP, INC.	5465 SW WEST BEAVERTON, O	
TOLERANCES UNLESS OTHERWISE SPECIFIED	**************************************				
	SIZE DWG. NO).			01
	SCALE:	DO NO	T SCALE DRAWING	SHEET	·