


OVERHEAD LAMPS


SLIDE THE BASE ADAPTER INTO THE BOTTOM OF THE LAMP. THEN SLIDE THE LAMP INTO THE TOP GROOVE OF THE HORIZONTAL SUPPORT.

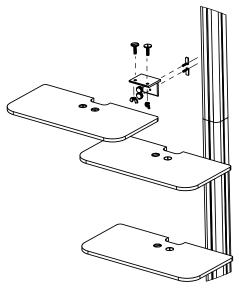

TIMBERLINE SHELVES

ATTACH BRACKETS INTO VERTICAL POSTS AND TIGHTEN. PLACE ACRYLIC SHELVES ON TOP OF BRACKET AND SECURE USING LARGE BOLTS AND WING NUTS.

TIMBERLINE ACCESSORY OPTIONS

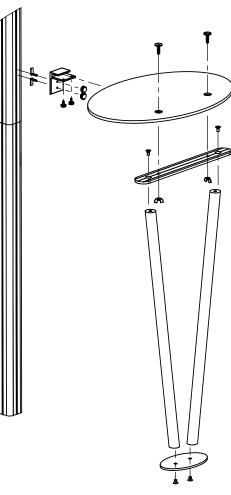

TIMBERLINE TABLE

(ALL HARDWARE IS PROVIDED)
ASSEMBLE TABLE LEGS TOGETHER

WITH THE TOP AND BOTTOM BASE PLATES AND SCREWS. THEN ATTACH THE ACRYLIC TABLE TOP WITH THE LARGE BOLTS AND WING NUTS TO TOP OF BASE PLATE ON LEGS. ATTACH CLAMP TO BACK OF ACRYLIC TABLE TOP FOR INSERTION INTO VERTICAL POSTS.

INSTITUTE TO STATE IN THE DOCUMENT AND DATE OF DATE OF THE STATE OF TH

7 6 5 4 3